
 




Q-LINE

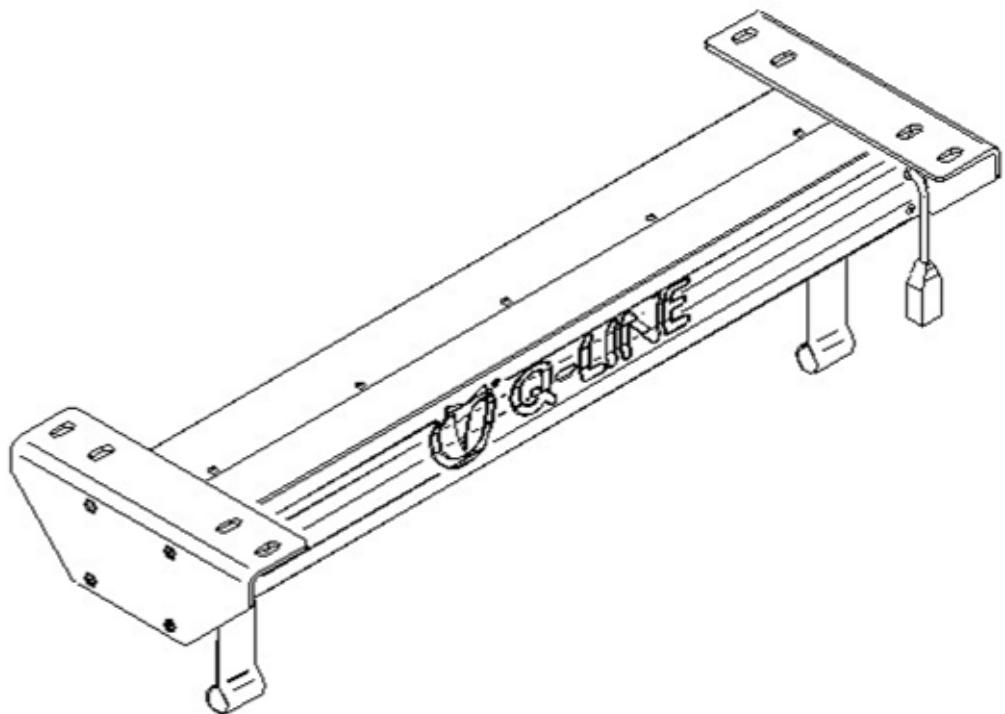

MANUAL ELECTRICAL LIFT




Content

INTRODUCTION.....	3
GENERAL	3
POST-DELIVERY INSPECTION.....	3
EXPLANATION OF SYMBOLS.....	4
Q-LINE EQUESTRIAN.....	4
SAFETY	5
SAFETY PRECAUTIONS	5
INTENDED USE	5
SAFETY PROVISIONS.....	5
TRANSPORT, STORAGE AND PRODUCT DISPOSAL	6
SHIPMENT	6
CONTENT OF DELIVERY.....	6
TRANSPORT AND LIFTING INSTRUCTIONS	6
STORAGE	7
RECYCLE AND DISPOSAL.....	7
INSTALLATION.....	8
WHO PERFORMS THE INSTALLATION.....	8
SPECIFICATIONS	9
PRODUCT RANGE	9
WIRING	10
HOW TO INSTALL	11
ADJUST THE STRAPS	14
LIMIT SWITCH ADJUSTMENT.....	15
SIZES.....	17
CONTACT	18
PRODUCER	18
SALES REPRESENTATIVE.....	18



 Q-LINE



SOLARIUM



IRRIGATION



TREADMILL



SAFETY WALL



WALKER

INTRODUCTION

GENERAL

This user's manual contains instructions concerning transport, storage, installing, functioning, operation, cleaning, maintenance and various adjustments to the products supplied by Q-LINE

This document also contains important information for the prevention of accidents and serious damage, with which you must be familiar with before and during operation of this product to ensure the safest usage possible, trouble-free operation.

This manual is an integral part of the scope of delivery of the product you have purchased. Keep it on or in the immediate perimeter of the product. Notify everyone who operates the product of the location of this manual.



Read this manual thoroughly before installation and use of the product you have purchased. Make sure that everyone who will operate or maintain the mill is familiar with this manual; they must familiarize themselves with the functioning and operation of this product and follow the instructions precisely.

For information concerning malfunctions, maintenance procedures or repairs not covered by this manual, please contact Q-LINE

 
POST-DELIVERY INSPECTION

Upon receipt, check the delivered goods for damage and confirm that they have been shipped in the specified manner. In case of damage, have the transporter make a written report and immediately notify your supplier.

Every product is provided with a serial number, which you can find on the body near the electrical input. Check whether this number matches the serial number specified in this manual and on the invoice. Always provide this serial number in any correspondence and when ordering spare parts. If a mill will not be put in service immediately, take the necessary measures as described in the chapter: 'Transport, storage and product disposal'



Q-LINE



SOLARIUM



IRRIGATION



TREADMILL



SAFETY WALL



WALKER

EXPLANATION OF SYMBOLS

	Not allowed to clean with pressure washer
	Remove the plug from mains outlet
	Read the manual before using
	Beware of danger
	Danger as result of electrical voltage
	Danger of the result of moving parts
	a remark with important (supplementary) information

Q-LINE EQUESTRIAN

 
Q-LINE is an independent company that is specialized in the manufacture of products used for the training and care of horses. We offer ready-to-use solutions for a wide range of applications in the field of equestrian sport.

Q-LINE provides you with advice concerning the resolution of technical problems and performs installations, overhauls and repairs. In addition, Q-LINE supplies spare parts for all its products and equipment.

If you have additional questions or require further explanation concerning specific matters related to the product you have purchased, please do not hesitate to contact us.



Q-LINE



SOLARIUM



IRRIGATION



TREADMILL



SAFETY WALL



WALKER

SAFETY

SAFETY PRECAUTIONS

Q-LINE has made every effort to inform you as correctly and completely as possible concerning potential dangers related to working with the product. You are responsible for ensuring that everyone complies with these rules.

We emphasize the importance the correct use of the product. Products from Q-LINE are equipped with safety and protection provisions. Despite this, it is still important to exercise care when working with the equipment.

INTENDED USE

Any other use is expressly prohibited except with permission from Q-LINE, in which case the type description provided above must be adapted accordingly.



Make sure that the horses are under continuous supervision while they are under the device. Be aware that a horse may become frightened as a result of unforeseen circumstances.

 
SAFETY PROVISIONS

During operation, all of the safety measures installed by the supplier of the equipment or the assembler of the complete system must be installed and functioning properly.

This equipment is provided with the following safety measures: Protection at the location of dangerous machine parts



Q-LINE



SOLARIUM



IRRIGATION



TREADMILL



SAFETY WALL



WALKER

TRANSPORT, STORAGE AND PRODUCT DISPOSAL

SHIPMENT

You may have received the product in one of the following ways:

- Delivery as a single shipment, complete with all the required installation materials.
- Delivery by Q-LINE, including installation upon arrival.
- Delivery in another way, according to your instructions.

CONTENT OF DELIVERY

Delivery is made in conformance with your order and consists of the following parts:

- Pallet Crate or Box with product
- Boxes with accessories
- Required installation materials
- Optional parts

TRANSPORT AND LIFTING INSTRUCTIONS

Make sure that the load that has to be lifted can be lifted safely and that it does not pose any danger to the surroundings. Use the correct lifting equipment and verify that the lifting equipment is in good condition. Make sure the lifting equipment is rated for the weight of the load that is to be lifted.



Always wear safety shoes and gloves.
Attach the lifting equipment in such a manner that it cannot damage the load that is to be lifted.

 
Avoid crossing, twisting or kinking the straps, cables or belts attached to the load.
Before lifting the load, straighten the cables, straps or belts and make sure the lift cables are free of the load. Protect the lifting equipment if contact with sharp corners or protrusions cannot be avoided.
Make sure the load is not lifted abruptly and avoid shock loads and swinging motions.



Never stand under the lifted load and make sure that bystanders cannot walk under the load. Make sure the load that is to be lifted can be lifted safely and does not pose any danger to the surroundings



Q-LINE



SOLARIUM



IRRIGATION



TREADMILL



SAFETY WALL



WALKER

STORAGE

When the equipment is stored for any period of time, place it in a dry area in which no large temperature changes occur. The product must be kept dry, in the normal operating position, on a wooden surface, and it must be covered.

The standard preservation measures are adequate for a maximum storage period of six months.

 
If the product is to be stored for longer than six months, contact Q-LINE for information about the conservation measures that are to be taken.

RECYCLE AND DISPOSAL

At the end of the service life of the equipment or parts thereof, the concerned materials and parts must be recycled or disposed of in an environmentally-friendly manner. The oil in the drive unit must be removed and disposed of in the manner specified by the locally applicable regulations. Any oil or grease that is accidentally spilled must be cleaned up immediately so it cannot come into contact with surface or ground water.



Q-LINE



SOLARIUM



IRRIGATION



TREADMILL



SAFETY WALL



WALKER

INSTALLATION

WHO PERFORMS THE INSTALLATION

Depending on how your order was made, the installation may be performed by:

 
- You
- Authorized Q-LINE dealer
- Q-LINE staff



Always wear safety shoes and gloves.
Attach the lifting equipment in such a manner that it cannot damage the load that is to be lifted.



Q-LINE



SOLARIUM



IRRIGATION



TREADMILL



SAFETY WALL



WALKER


SPECIFICATIONS

PRODUCT RANGE

	21-5-70-00010	21-5-70-00020	21-5-70-00025	21-5-70-00030
Length in mm	1648	1648	1648	948
WLL kg	75	125	145	45
Watt	240	240	290	240
Voltage	230	230	230	230
Hz	50	50	50	50



 Q-LINE



SOLARIUM



IRRIGATION



TREADMILL




SAFETY WALL




WALKER

WIRING

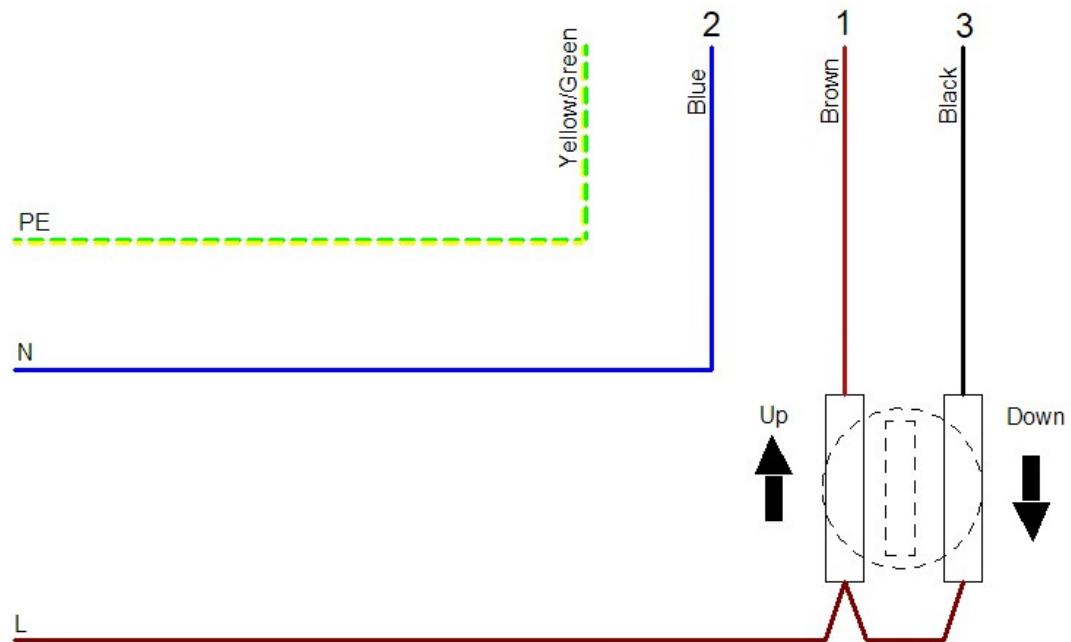



Q-LINE

 

SOLARIUM



IRRIGATION



TREADMILL




SAFETY WALL




WALKER

HOW TO INSTALL

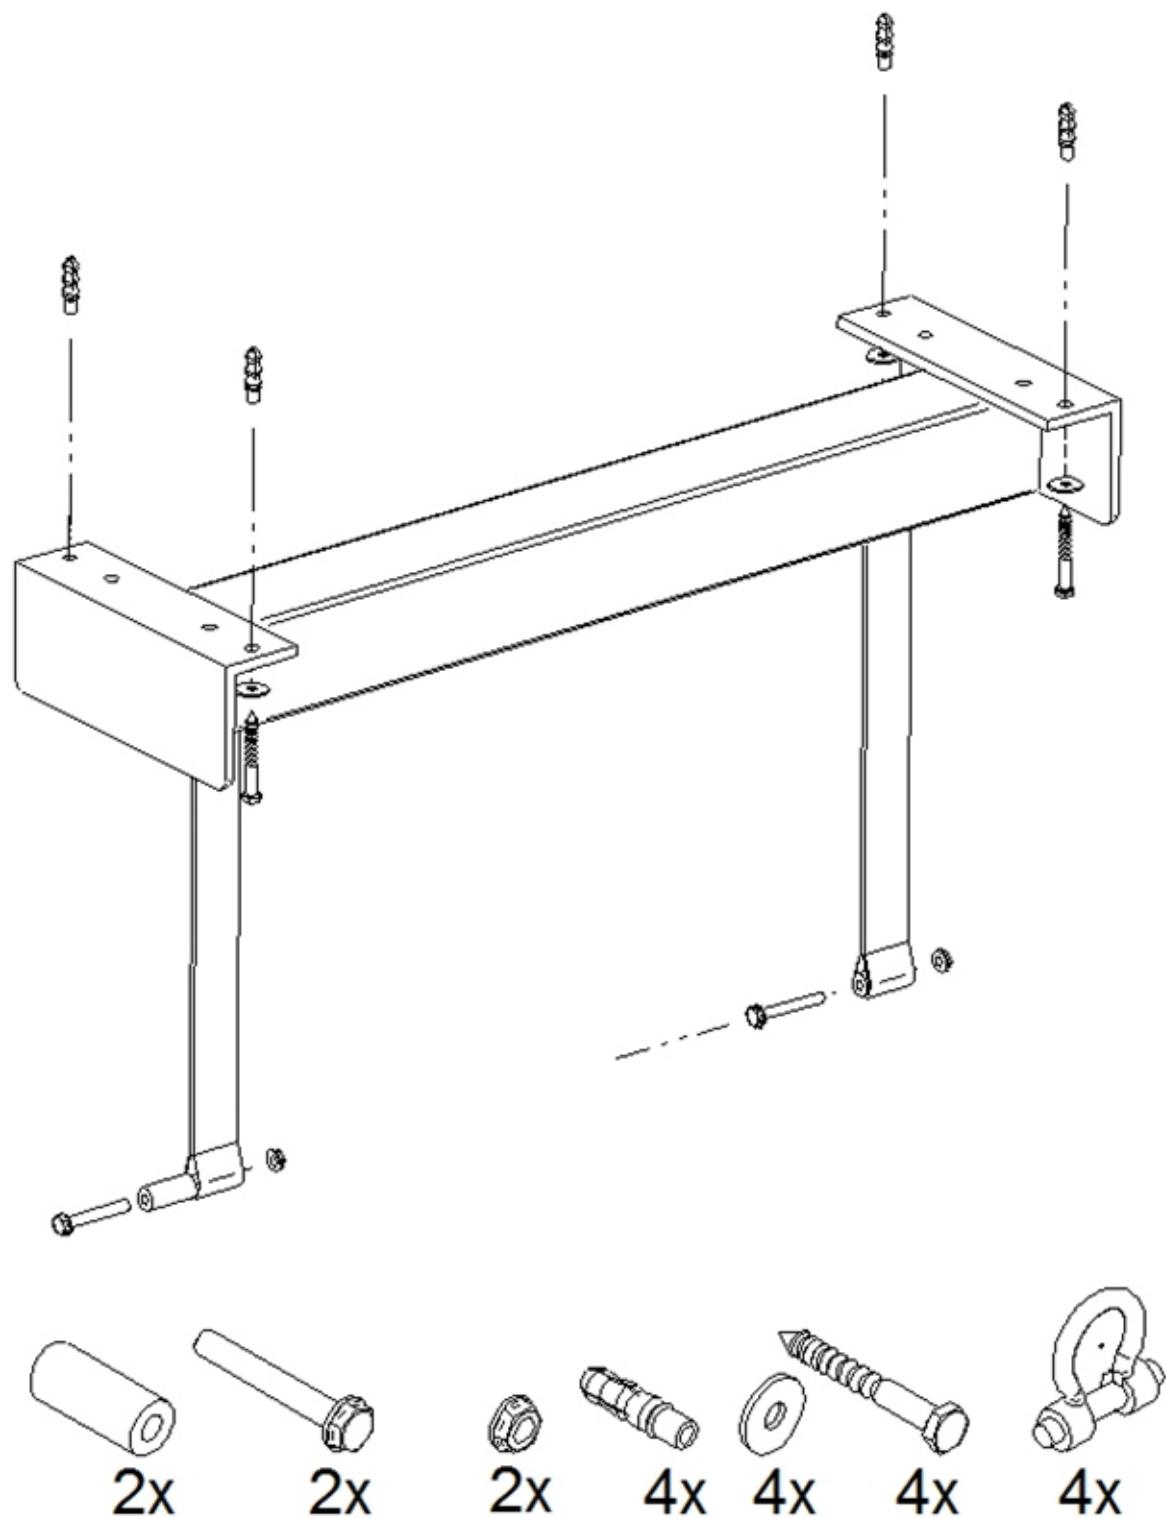



Q-LINE

 

SOLARIUM



IRRIGATION



TREADMILL



SAFETY WALL

 


WALKER





Q-LINE



SOLARIUM



IRRIGATION



TREADMILL





SAFETY WALL



WALKER


Avoid crossing, twisting or bending when mounting the solarium.

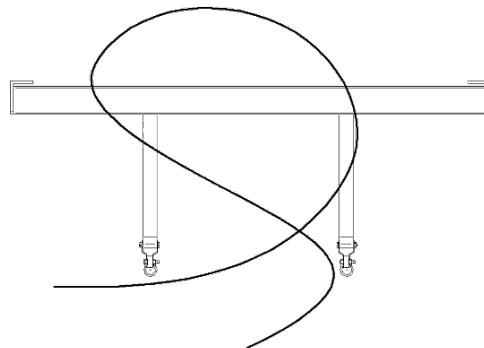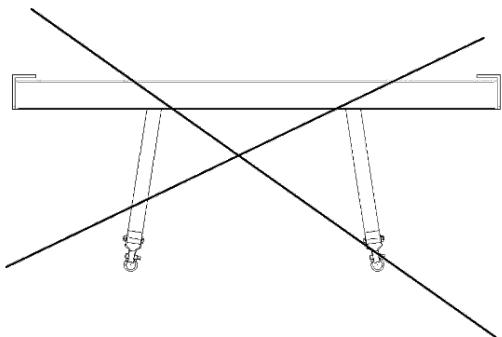

The lifting straps must hang straight down. If a different intermediate length is required to suspend the solarium, you can adjust the straps. See **ADJUSTING THE STRAPS** for instructions.



 Q-LINE



SOLARIUM



IRRIGATION



TREADMILL



 
SAFETY WALL



WALKER

ADJUST THE STRAPS





SOLARIUM



IRRIGATION



TREADMILL



SAFETY WALL



WALKER

LIMIT SWITCH ADJUSTMENT

Safety clip and settings

The safety clip is a critical part of the safety system of this installation. Removal of the safety clip or adjustment of settings outside the prescribed procedures is not permitted.

Incorrect adjustment, modification, or removal of safety devices may result in hazardous situations for people and animals.

In the event of unauthorised modifications, CE conformity becomes void and Q-Line cannot be held liable for any damage, injury, or consequential loss arising therefrom.


Operate the installation only in accordance with this manual and with all safety devices correctly installed and adjusted.

Adjusting the upper and lower positions of the solarium lift

The lift is factory-set to a default highest and lowest position. If you wish to adjust these later, follow the steps below.

General instructions

There is a manual adjustment lever on the lift. This lever is normally in the middle position. In this position, you will feel slight resistance when moving it up or down – this is normal.

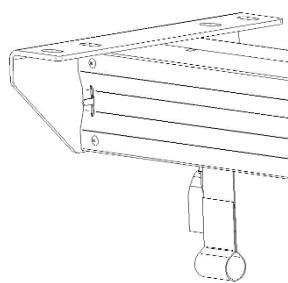

Setting a new highest position

Move the lift up to the desired highest point.

 
Move the lever down twice:

- First time: this presses an internal button; you'll feel the lever become looser.
- Second time: press the lever down again until you hear a click. The lever will return to the middle position.

The new highest position is now set.



Q-LINE



SOLARIUM



IRRIGATION



TREADMILL



SAFETY WALL



WALKER

Setting a new lowest position

The procedure is exactly the same, but in the opposite direction:

Lower the lift to the desired lowest point.

Move the lever up twice:

- First time: internal button is pressed, lever becomes loose.
- Second time: press the lever up again until it clicks. It will return to the middle position.

 
The new lowest position is now set.

Note

- The lift must be stationary during adjustment.
- If you no longer feel any play or resistance in the lever, the new position has been successfully stored.



Q-LINE



SOLARIUM



IRRIGATION



TREADMILL







SAFETY WALL



WALKER

SIZES




21-5-70-00030

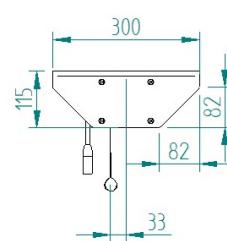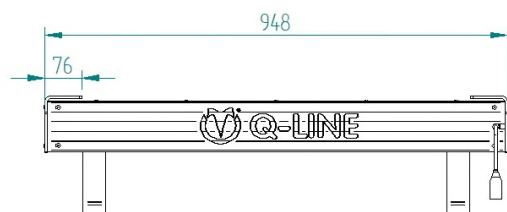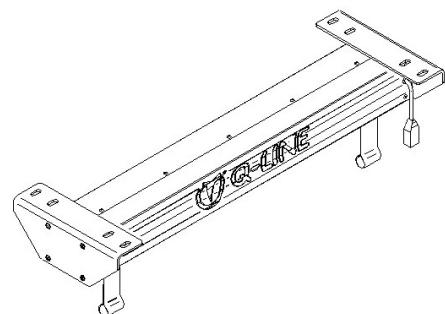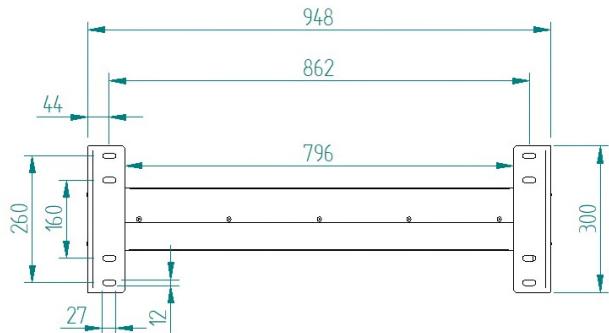

21-5-70-00010


21-5-70-00020

21-5-70-00025

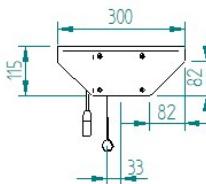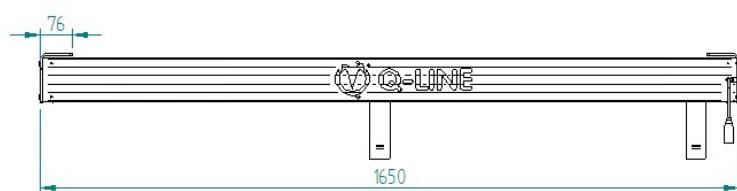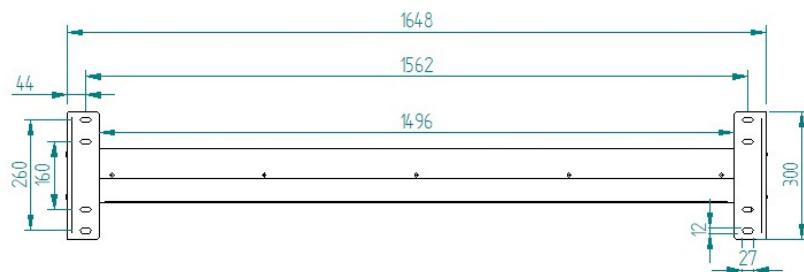



Q-LINE

 

SOLARIUM



IRRIGATION



TREADMILL



SAFETY WALL



WALKER

CONTACT

PRODUCER

Q-Line Equestrian BV
Haarbrinksweg 47
7678 RS Geesteren
The Netherlands
Tel +31546633700
e-mail: info@q-line.com
website: www.q-line.com

SALES REPRESENTATIVE

Name:

Address:

Zip code:

Town:

Land:

Phone:

e-mail:

website: